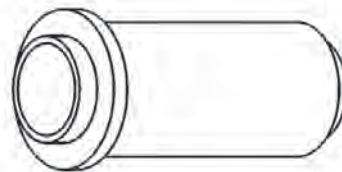 


Dipstick Tube Seal Installer

 
Part No. 45RFE.TOOL01

Oil Pump Seal Installer

Part No. 45RFE.TOOL02

Front Cover Inner Snap Ring Installer

 
Part No. 45RFE.TOOL03

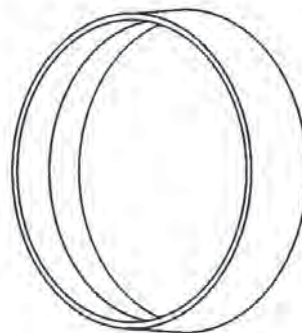UD/OD Balance Piston Seal Protector

 
Part No. 45RFE.TOOL04

Manual Shaft Seal Installer

Part No. 45RFE.TOOL05

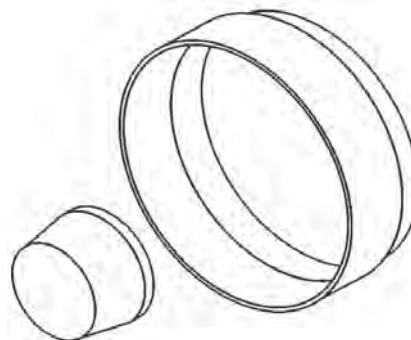Input Clutch Piston Lip Seal Protector

Part No. 45RFE.TOOL06

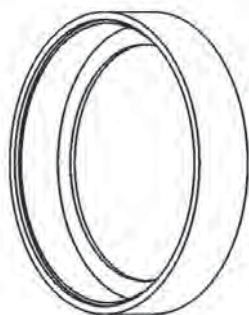2nd Clutch Bellville Spring and Snap Ring Installer

Part No. 45RFE.TOOL07

4th Clutch Piston Return Spring Compressor

Part No. 45RFE.TOOL08

 


AUTOMATIC CHOICE



THE AUTOMATIC TRANSMISSION PARTS WAREHOUSE

UD/OD Balance Piston Spring Compressor

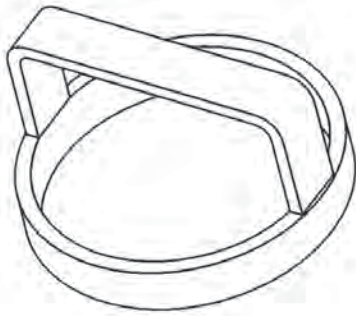

Part No. 45RFE.TOOL09

Low/Reverse Bellville Spring Compressor



Part No. 45RFE.TOOL10

Transmission Pressure Test Adapter

 


This special adapter is used for pump pressure line diagnostics in 45RFE and 545RFE Automatic Transmissions.

- 1999 to current models

Part No. 45RFE.TOOL11

Universal Valve Body Reaming Fixture By Sonnax®

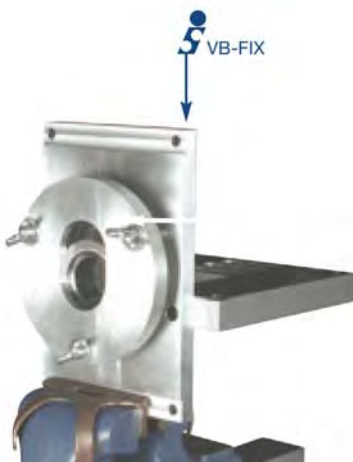

Due to the complexity of some valve or pump bodies, existing reaming processes can't be used to repair worn components.

The Sonnax valve body reaming fixture allows for consistent reaming results, ease of use and access to bores previously unserviceable with standard bench style tool kits.

Part No. AG4.VA05

Universal End Clearance Gauge



For use on all automatic transmission front pumps, plus many other uses.

Part No. TOOL.05



Universal Oil Seal Removal Tool



Use with slide hammer

Part No. TOOL.41



A
U
T
O
M
A
T
I
C
C
H
O
I
C
E



T
H
E
A
U
T
O
M
A
T
I
C
T
R
A
N
S
M
I
S
S
I
O
N
P
A
R
T
S
W
A
R
E
H
O
U
S
E