


Case Insulator Remover

Removes the transaxle wiring harness connector from the case.



Part No. 4T40E.TOOL01

Cooler Pipe Seal Remover/Installer

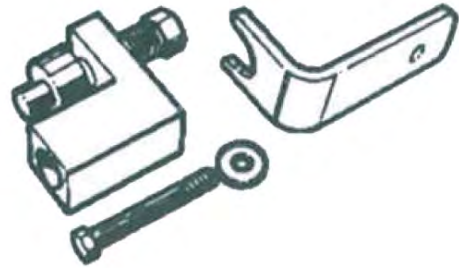

Part No. 4T40E.TOOL02

Valve Body Parts Stripping Tray



Part No. TOOL.03

Universal End Clearance Gauge



Part No. TOOL.05

GM Snap Ring Removal Tool



Part No. TOOL.26

Universal Oil Seal Removal Tool

Use with slide hammer



Part No. TOOL.41