

**Transfer Shaft Bearing
Snap Ring Remover/Installer**

Part No. TOOL.68

Universal End Clearance Gauge

For use on all automatic transmission front pumps, plus many other uses.

Part No. TOOL.05

Universal Oil Seal Removal Tool

Use with slide hammer

Part No. TOOL.41

Universal Pump Removal Tool

Quickly removes conventional style oil pumps without damage

Part No. TOOL.31