

Toolkit**Contains the following items**

- Primary and Secondary bearing removal tools to allow case separation.



Part No. CVT.TOOL01

Universal Pulley Lifter**Use with the following Tools**

- CVT.TOOL03
- CVT.TOOL04
- CVT.TOOL06



Part No. CVT.TOOL02

Complete Toolkit Without Universal Pulley Lifter
Use with CVT.TOOL02**Includes the following:**

- Press, transmission housing primary
- Press, transmission housing secondary
- Pulley holder
- Valve body tool
- Secondary pulley ring



Part No. CVT.TOOL06

Pulley Holder**Use with the following Tools**

- CVT.TOOL02
- CVT.TOOL04



Part No. CVT.TOOL03

Ring for Pulley Lifter

 


Use with the following Tools

- CVT.TOOL02
- CVT.TOOL03


Part No. CVT.TOOL04

Oil Pump Remover Tool

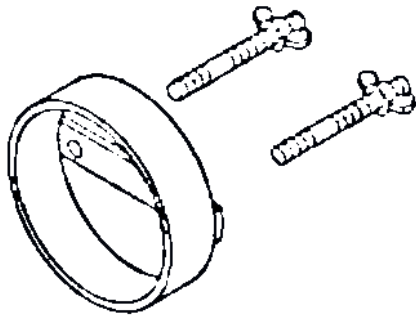


Part No. CTX.TOOL01

 Primary Shaft Locking Tool

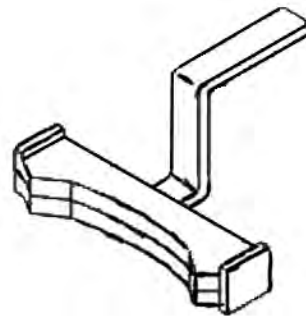


Part No. CTX.TOOL02

 Secondary Bearing Removal Tool
Use With CTX.TOOL04 to Split Case

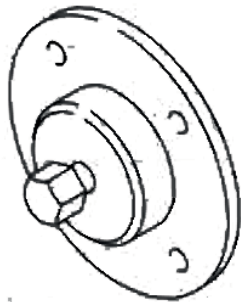


Part No. CTX.TOOL03

 Primary Bearing Removal Tool
Use With CTX.TOOL03 to Split Case

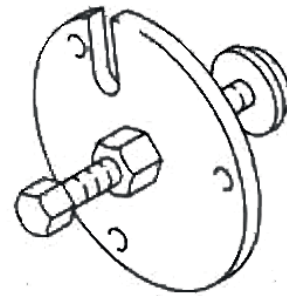


Part No. CTX.TOOL04

 Forward Clutch Piston Installer

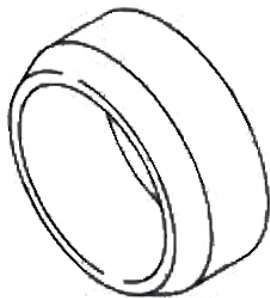

Part No. CTX.TOOL05

 Reverse Clutch Piston Installer

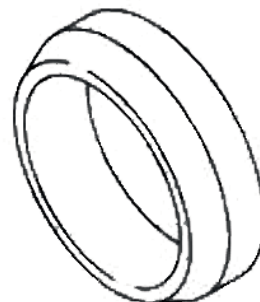

Part No. CTX.TOOL06



AUTOMATIC CHOICE




THE AUTOMATIC TRANSMISSION PARTS WAREHOUSE

ZF SPECIAL TOOLS


VT1-27T, VT1-32A CVT

 Secondary Unit Puller
Use with Spacer CTX.TOOL13

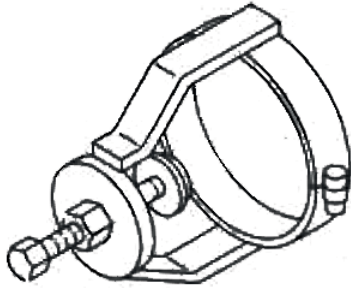

Part No. CTX.TOOL09

 Spacer for CTX.TOOL09

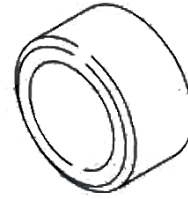

Part No. CTX.TOOL13

Pressure Gauge 0-60 Bar



Part No. CTX.TOOL08

Pressure Gauge 0-10 Bar



Part No. CTX.TOOL10

Valve Body Parts Stripping Tray



Part No. TOOL.03

Universal End Clearance Gauge



Part No. TOOL.05

Universal Oil Seal Removal Tool

Use with slide hammer



Part No. TOOL.41



AUTOMATIC CHOICE



THE AUTOMATIC TRANSMISSION PARTS WAREHOUSE