

AW 55-50SN Solenoid Fitment Information

Fitting late SLT & SLS valves on vehicles up to serial code 02E.

The phase one and phase two versions of these solenoids are now no longer serviced and it is necessary to fit the later phase three type solenoid

to do this you will require the following parts
1 x SLS solenoid 5550.SOL09, 1 x SLT solenoid 5550.SOL10,
& 1 x longer wiring loom 5550.ELE05.


It may also be required to modify the bracket on the SS1 solenoid, to prevent it fouling the new style SLS solenoid by elongating the hole in the mounting bracket so that it can be turned slightly, to give sufficient clearance.

It will also be necessary to check to see if you have phase one type solenoids using the illustration at the bottom of the page if you do, you will also need a modified holding bracket 5550.SOL12.

If you have a vehicle code 02F and above you may change the solenoids individually as required with no modifications.

Back

Identifying Early Phase One SLT & SLS Solenoid

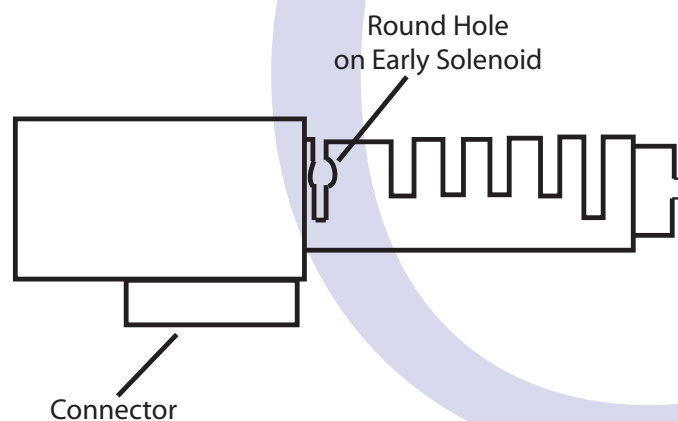

If you have the above style it is a phase one solenoid to fit the later style SLT & SLS solenoids you will need to fit the later holding bracket part number 5550.SOL12.