



## Technical Tips

### BMW X3 2003-2006 with/ without modification

Please look carefully at the transfer case for a BMW X3, when you need to exchange it. The 2.0D version of the X3 2003-2006 (E83) can have a modification from BMW, in which case it has to be exchanged for another version.



You need to take the measurements and note the OEM-number from the tag.

see picture


OEM-No.: 3455137  
**YATC400.ASSY01**



OEM-No.: 3455138  
**YATC400.ASSY05**

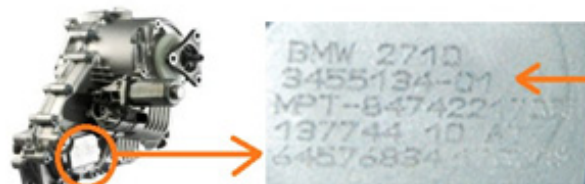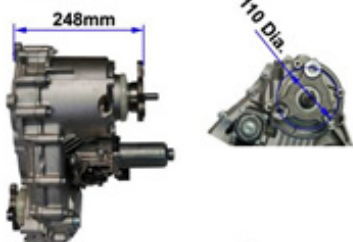

OEM-No.: 3455132  
**YATC400.ASSY04**

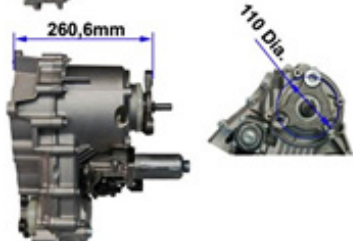

**YATC400.ASSY02**  
OEM-No.: 3455134  
OEM-No.: 3455139  
**YATC400.ASSY03**



Excessive wear/heat due to high friction can lead to breakage of the differential in the transfer box. Please make sure all sizes, brands and tread design of the tyres are exactly the same and that the pressures are correct.

Our **TOOL.132** is an easy tool to help you measure all tyres in 5 minutes with the car on the ground.

